

ARCA-SWISS FLIPLOCK ADJUSTMENT



- 1) Open the Quick Release clamp by pulling the small silver safety button toward the tip of the Fliplock lever.
- 2) Swing the lever out to the 3:00 position.

ARCA-SWISS FLIPLOCK ADJUSTMENT



3) Using your thumbnail, catch and slide the exposed silver worm gear inside the lever, toward the end of the lever.

ARCA-SWISS FLIPLOCK ADJUSTMENT



4) Flip the lever all the way open to the 12:00 position. The jaws on the quick release clamp will open.

ARCA-SWISS FLIPLOCK ADJUSTMENT



5) While holding the Fliplock lever open, pinch the quick release clamp "jaws" closed.

ARCA-SWISS FLIPLOCK ADJUSTMENT



- 6) While keeping the clamp jaws closed, move the tension adjustment wheel in small increments.
- 7) Moving the wheel up (towards the top of photo) will tighten the clamp. Moving the wheel down, will loosen the clamp.
- 8) It is important to make small changes and test for the best tension setting for your quick release plate.